

[Return to Cuckoo Gifts](#)  
[click back in your browser](#)

### [Cuckoo Marketing Information for Flying Your R/C Helicopter !!](#)

Please watch our 30,second video Link on how to hold and fly your R/C Helicopter and or read the instructions below !!

**Note:** All of our rc helicopters are taken out of the Box & Fully Checked Tested and Repacked before they are dispatched.

Be sure to unpack your rc helicopter carefully removing all of the tapes and securing devices that hold your rc helicopter and rc controller in position.

Be sure you read all of the instructions both here and in/on the BOX and familiarize yourself before Flying your R/C Helicopter.

**Note :** The Sun's rays are infra red rays & can interfere with the performance of the Indoor rc helicopters when shining in through a window.

Each R/C Helicopter will require 6, New AA batteries which are not included unless purchased with the product.

Switch on your rc helicopter, a strobe light will light inside the rc helicopter. Switch the Rc controller to on, a red light will come on, now holding the rc controller in your left hand and your rc helicopter in your right hand push the left hand joy stick slowly forward with your thumb to about half way then let your helicopter go, if the rc helicopter spins anti clockwise press the right hand trimmer button repeatedly in quick succession until it hovers without spinning, if it spins clockwise press the left hand trimmer button.

**Note :** Some of the rc controllers may vary slightly if you have a round trimmer then operate as above but turning the trimmer knob in the same way.

Once your rc helicopter has achieved level flight with out spinning you can then familiarize yourself with the right hand joy stick, which is for turning left or right, use very lightly and with small touch movements to the left or right.

To charge your rc helicopter: Turn off both helicopter and controller and leave to cool the lithium battery in the rc helicopter for 10 minutes (this will extend the life of this battery).

When your rc helicopter has cooled take the charging wire from inside the hatch at the front of the rc controller, and plug it into your rc helicopter.

**NOTE:** the charging plug only fits in one way do not force it.

Now turn on the rc controller and a green light will come on, when this green light goes out the rc helicopter is fully charged.

**NOTE:** If the green light does not come on this does not mean that the charger is faulty continue to charge for approx 20, minutes and it will be fully charged. Then unplug and stow away the charging lead, switch on your rc helicopter and reset the rc controller to on re-trim if necessary and you are ready to fly again.

For your convenience : The rc helicopter is supplied with a Spare Tail Rotor Blade within the packaging If you have to change this item take care & make sure that you fit it the same way round as the previous one and re trim your rc helicopter as per the instructions here and on the box.

**Top Tip:** When you have become an experienced rc helicopter pilot, to gain some extra forward flight you can place a very small piece of blue tack on the under nose of the rc helicopter to gain more forward motion, increase the size of the blue tack as needed.

**Finally :** All of our rc helicopters are tested fully and repacked before dispatch and are in perfect working order to avoid damaging your rc helicopter make sure that there are not any sharp objects or animals in the area that you are flying your rc helicopter

**Team @ Cuckoo Marketing!!**